

Remove Double Hung Sash

Tools Needed
• Gloves



Unlock window




Raise up sash about 3-5"

Remove Double Hung Sash



- Activate tilt latches
- Rotate sash inward 90 degrees

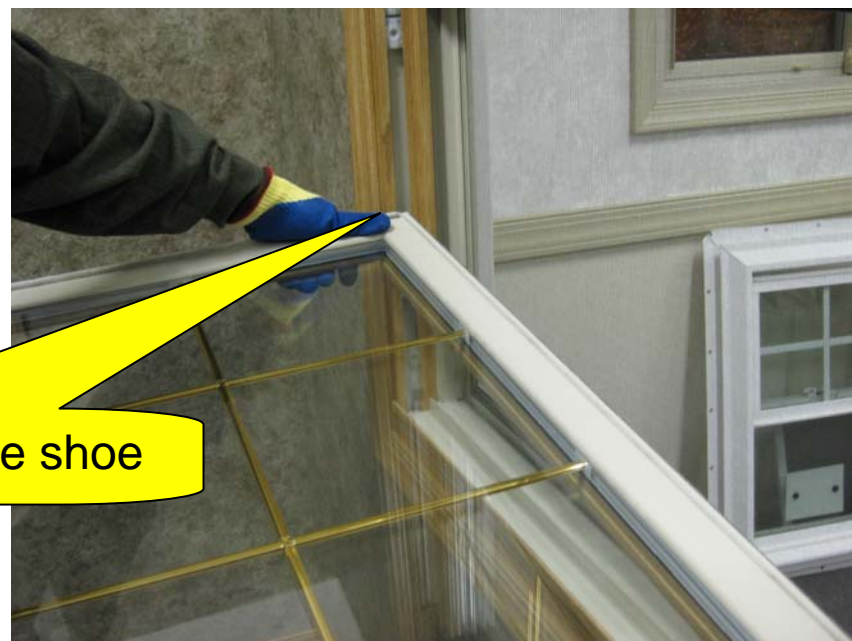

Lift pivot pin out from balance shoe

Remove Double Hung Sash

Lift other pivot pin out from balance shoe



Remove sash from window

