

Replace Pivot Pins

Tools Needed

- Screw Driver or powerdriver with bit
- Gloves




Broken pin in the bottom part of the window

Broken pin in the bottom part of the window




Replace Pivot Pins

- Remove the sash (see [Remove Double Hung Sash](#))
- Remove screw with screwdriver or powerdriver

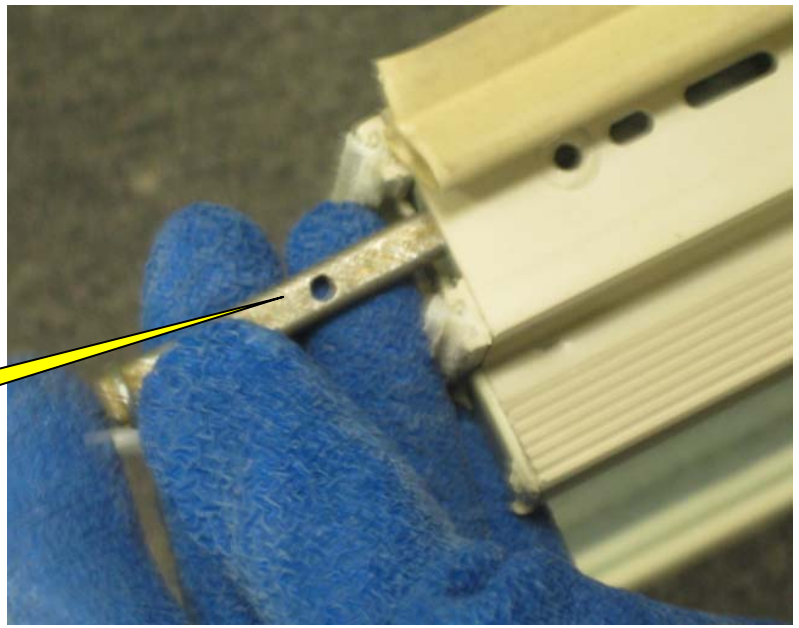

New pivot pin

Replace Pivot Pins

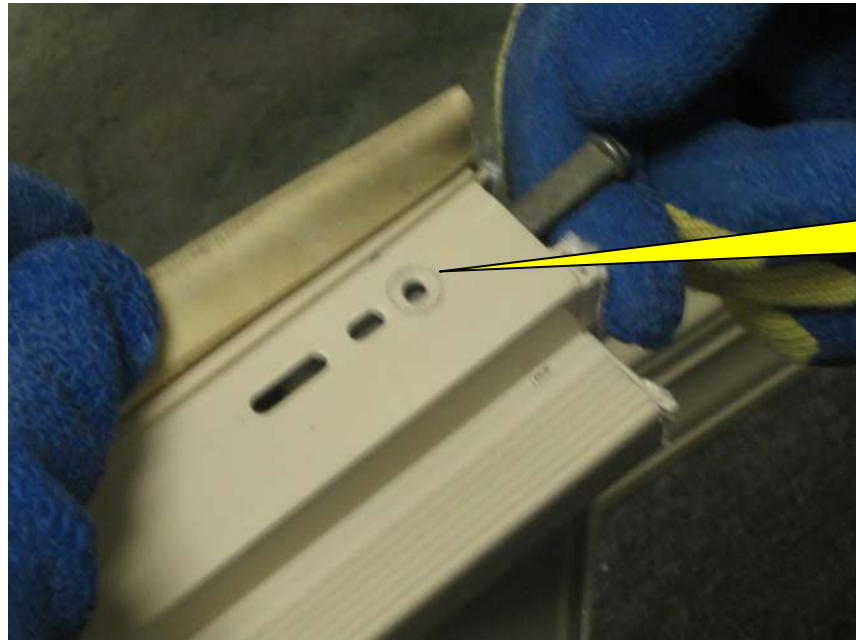

- Insert pin into sash
- Align hole in pin to hole in sash

Secure and then tighten the screw with screwdriver or powerdriver

